


Maison

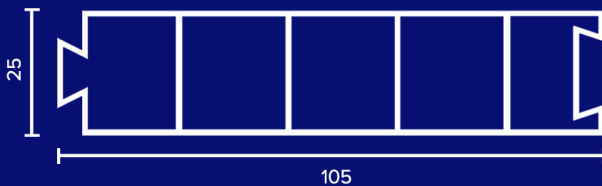


Section Profile:


Interlocking:




Sash:

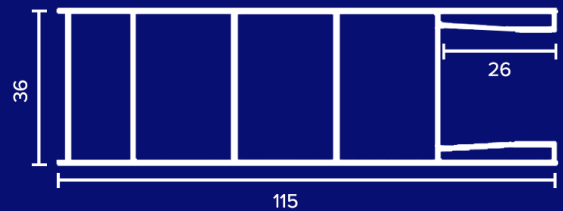


QE Panel:

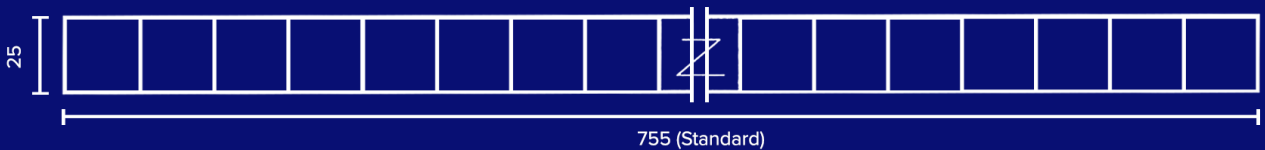

* Switchable between Interlocking & QE Panel for different visual representation

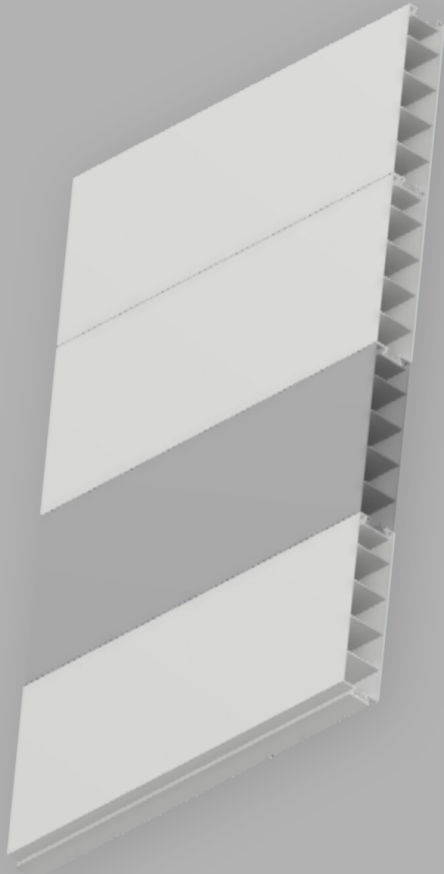

Orientation of the Interlocking is highly customizable, giving you freedom of creativity & wide combination of styles.

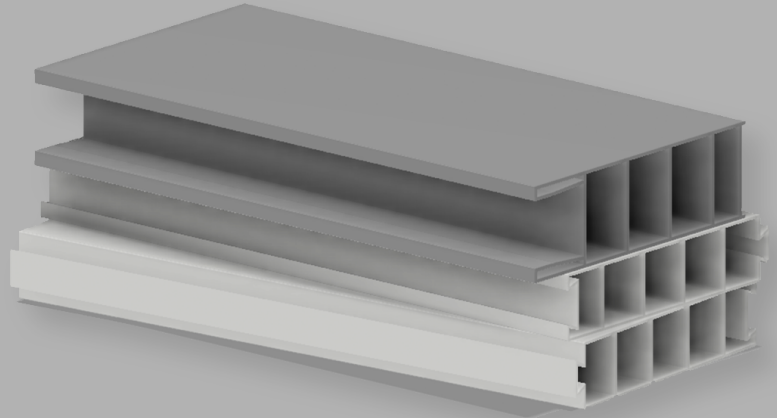

The size of Maison Door can also be easily fabricated to the desire length and knockdown into individual pieces which are convenient to carry before installation.



Customizable & Easy to Install



Waterproof & Corrosion Free




Variety Finishing & Customizable



Termite Free



Recyclable & Eco-Friendly

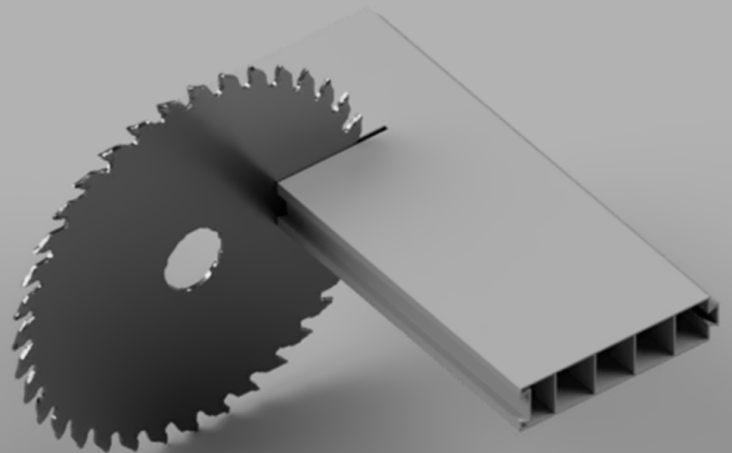

QUALITY PLUS SDN BHD
QUALITY PLUS MARKETING SDN BHD

PTD111513 (NEW LOT 83269), BATU 15 1/2,
JALAN SUNGAI TIRAM, 81800 ULU TIRAM,
JOHOR, MALAYSIA

Tel : 07-863 7078 Fax : 07-863 3467
Email: info@qualityplus.com.my
Website: www.qualityplus.com.my



Fabrication Note

If further fabrication is needed, sash and panel sizes can be easily calculated via method below:

Long Sash:
Follow required length


Short Sash:
Required length - 230mm

Panel:
Required length and width - 185mm

Example

Required Door Size:

Actual Size:

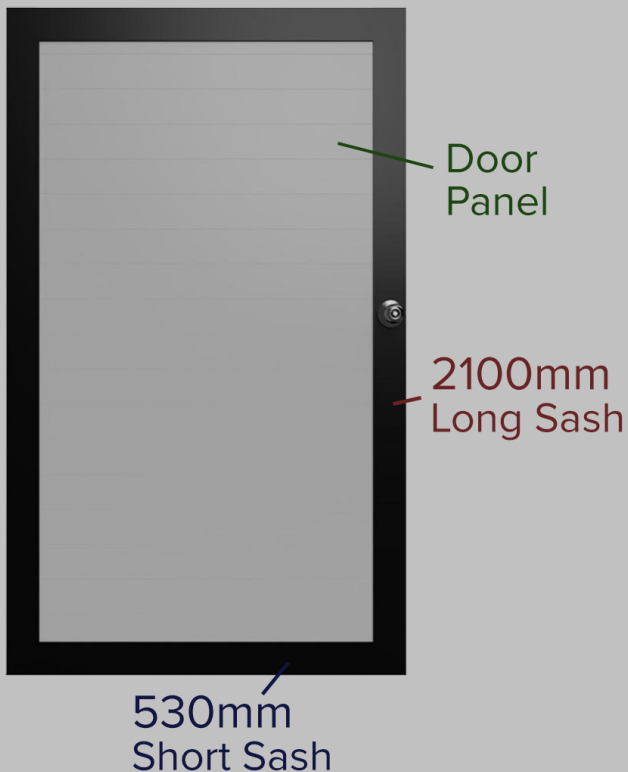

Long Sash:
2100mm

Short Sash:
760mm - 230mm
= 530mm


Door Panel:

Length:
2100mm - 180mm = 1920mm


Width:
760mm - 180mm = 580mm

Installation Guide


1. Insert connectors on the longer sash & tighten with a screw.

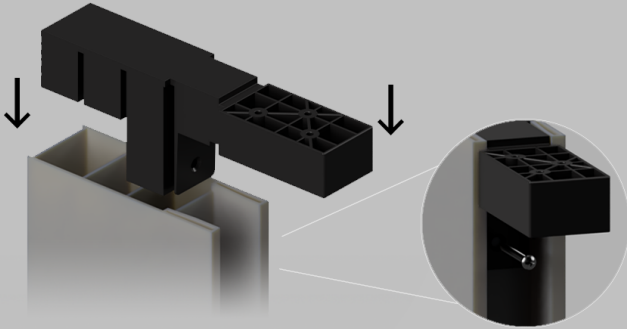


2. Insert interlocking or panel between sash.

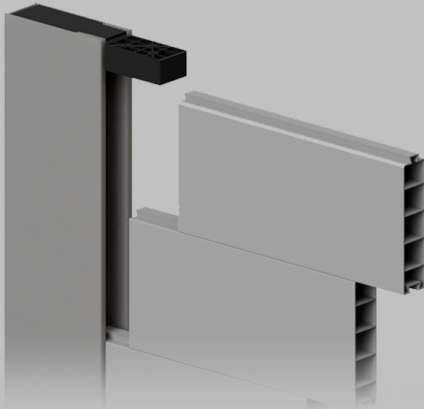


3. Insert shorter sash onto connector.

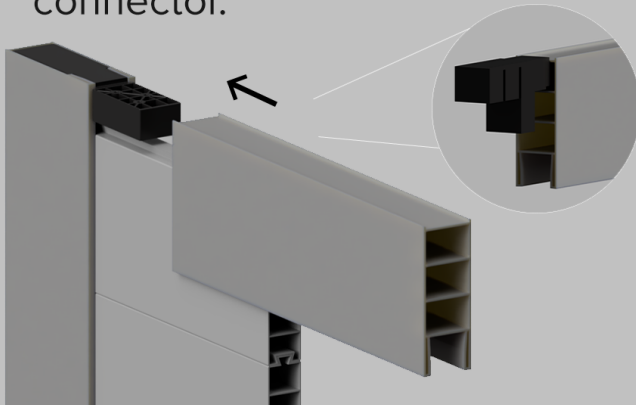

4. Insert other side of sash along with connector.

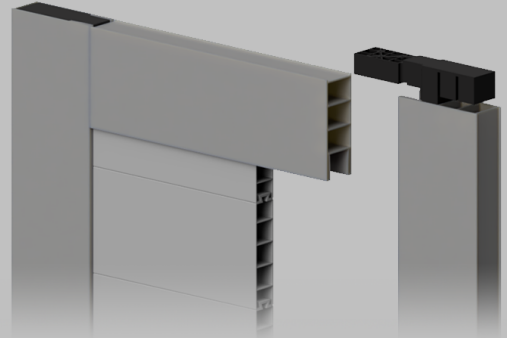

5. Insert cover and nails on sash to the connector for all sides.

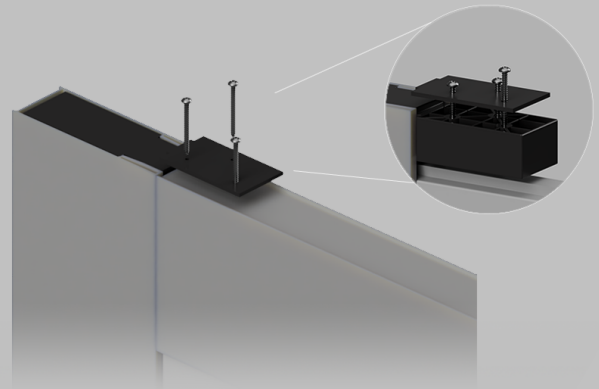

6. Install accessories.

